John Deere HPX and XUV Heater Kit 4-14916





MOUNTING INSTRUCTIONS

With replacement parts drawing



BOX 70 • LITCHFIELD, MINNESOTA 55355-0070 (320) 693-3221 Fax: (320) 693-7252 Visit our web site at: www.800cabline.com

Note: This kit does not include engine hookup fittings! Engine fittings need to be ordered from your local John Deere Dealer.

Gas model fittings: JD part number VGB10547 Diesel model fittings: JD part number VGB10548

1. Turn engine off and allow to cool. Drain coolant from the radiator.

Mounting the heater unit

- 2. Mount the bracket to the heater unit and secure using (3) 1/4-20unc X 3/4" self-tapping screws
- 3. Place heater unit against passenger side seat base area. Locate bracket 1" from outer edge of seat panel. Match drill (2) 3/16" diameter holes. Secure using (2) 1/4-20unc X 3/4" self-tapping screws.
- 4. Install (2) louvers into the heater unit. See Figure 1.

Connecting heater hoses

- 5. Remove heater nipple plugs if present.
- 6. Connect (2) heater hoses, 5/8" X 7" long to each nipple of the heater unit and secure with small hose clamps.
- 7. Install h-valve and secure with small hose clamps. Locate valve as shown in figure one.
- 8. Connect (1) heater hose 18" long to the outer nipple of the H-valve to the engine area. Secure with small hose clamps.
- 9. Connect (1) heater hose 36" long to the inside nipple of the H-valve to the engine area. Secure with small hose clamps.
- 10. Install the return radiator hose tee. Gas and Diesel models have different hose routes. Select a location of the machine's 1" return hose line for best installation of the hose tee.
- 11. Install the hose tee and secure using (2) large hose clamps.
- 12. Connect the 36" long heater hose that routes from the inside nipple of the H-valve to the 5/8" nipple of the hose tee and secure with (1) small hose clamp.
- 13. Install the 5/8" to ½" hose reducer and the ½ x 48" long heater hose to the 18" long heater hose that routes from the outside nipple of the H-valve and secure using small hose clamps.
- 14. Route the ½" x 48" long heater hose around the rear to the driver side of the engine area, to the fuel filter area. See Figures 2 and 3.

Diesel Models follow steps 15-18 (See Figure 4A)

- 15. The fuel filter may need to be loosened in order to access the area of supply port for the ½" heater hose. Loosen fuel filter bracket and rotate filter unit out of the way.
- 16. Remove the engine block plug and install fittings kit JD VGB10548.
- 17. Install the ½ x 48" long heater hose and secure with small hose clamp. Trim hose if required.
- 18. Rotate fuel filter back to original location and secure.

Gas Models follow steps 19-23 (See Figure 4B)

- 20. Remove the engine temperature sensor.
- 21. Install fittings kit VGB10547.
- 22. Re-install the engine temperature sensor into the fittings kit VGB 10547.
- 23. Connect the ½ x 48" long heater hose and secure with small hose clamp. Trim hose if needed.

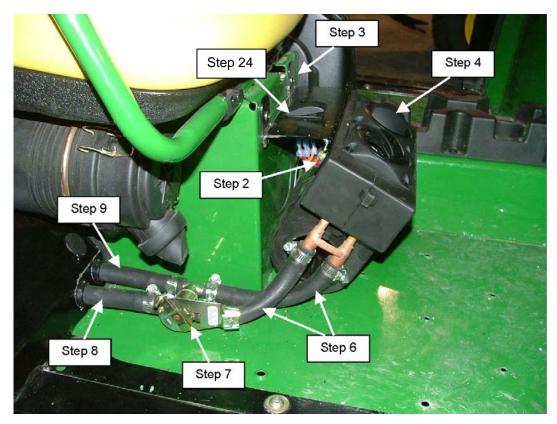


Figure 1

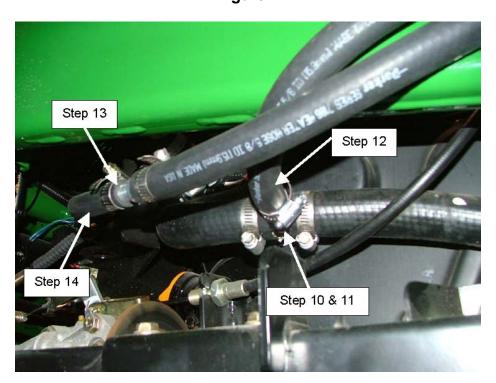


Figure 2

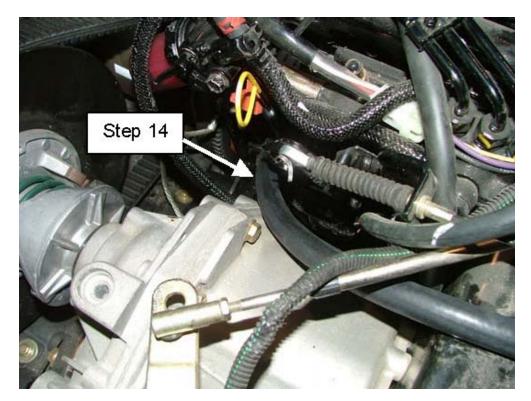


Figure 3

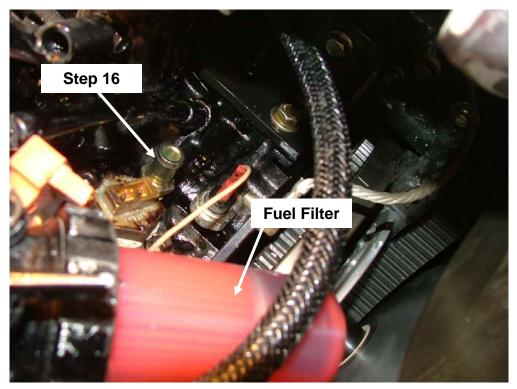


Figure 4A (Diesel Models Only)

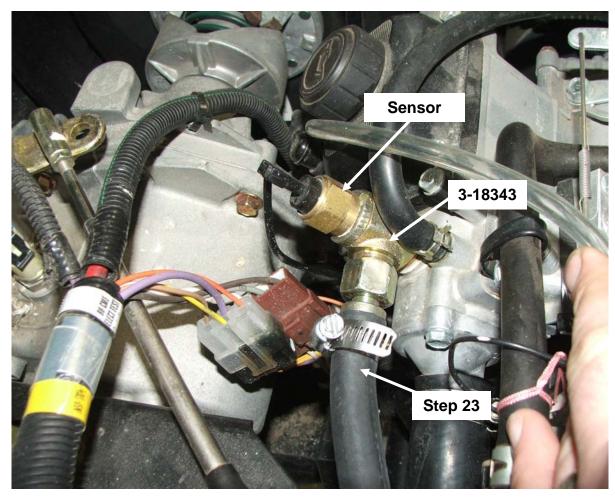


Figure 4B (Gas Models Only)

15A Fuse Step 27

John Deere HPX Heater Kit 4-14916

Figure 5

Installing the rocker switch and connecting power (Refer to drawing 3-18340)


- 24. Install the rocker switch with the wire harness into the rectangular hole of the heater unit mount bracket. See Figure 1.
- 25. Remove the gray connector that is supplied with the heater unit wires. This connector will not be used.
- 26. Using a electrical wire crimping tool, connect wire harness wires with blue butt connectors to the heater unit wires. Red to red, orange to orange and black to black.
- 27. Secure the black wire with terminal eye end to a grounding (-12VDC) location. See Figure 5.
- 28. Connect the red wire with terminal eye to the positive (+12VDC) terminal of the battery.
- 29. Check switch operation. Positions are low speed, off and hi speed.

Completing Installation

- 26. Refill radiator and start engine. Allow engine to warm up.
- 27. Purge the system of air. A pressure tester applied to the radiator may be used to assist in bleeding. Open and close the H-Valve several times during the purging air process. It may take two to three times to bleed air for best results.
- 28. Secure loose heater hoses or wires with nylon ties supplied with kit.
- 29. Install the protective hose cover over the H-valve and heater hoses. Secure with nylon tie straps as shown in Figure 6.
- 30. Installation is now complete.



Figure 6

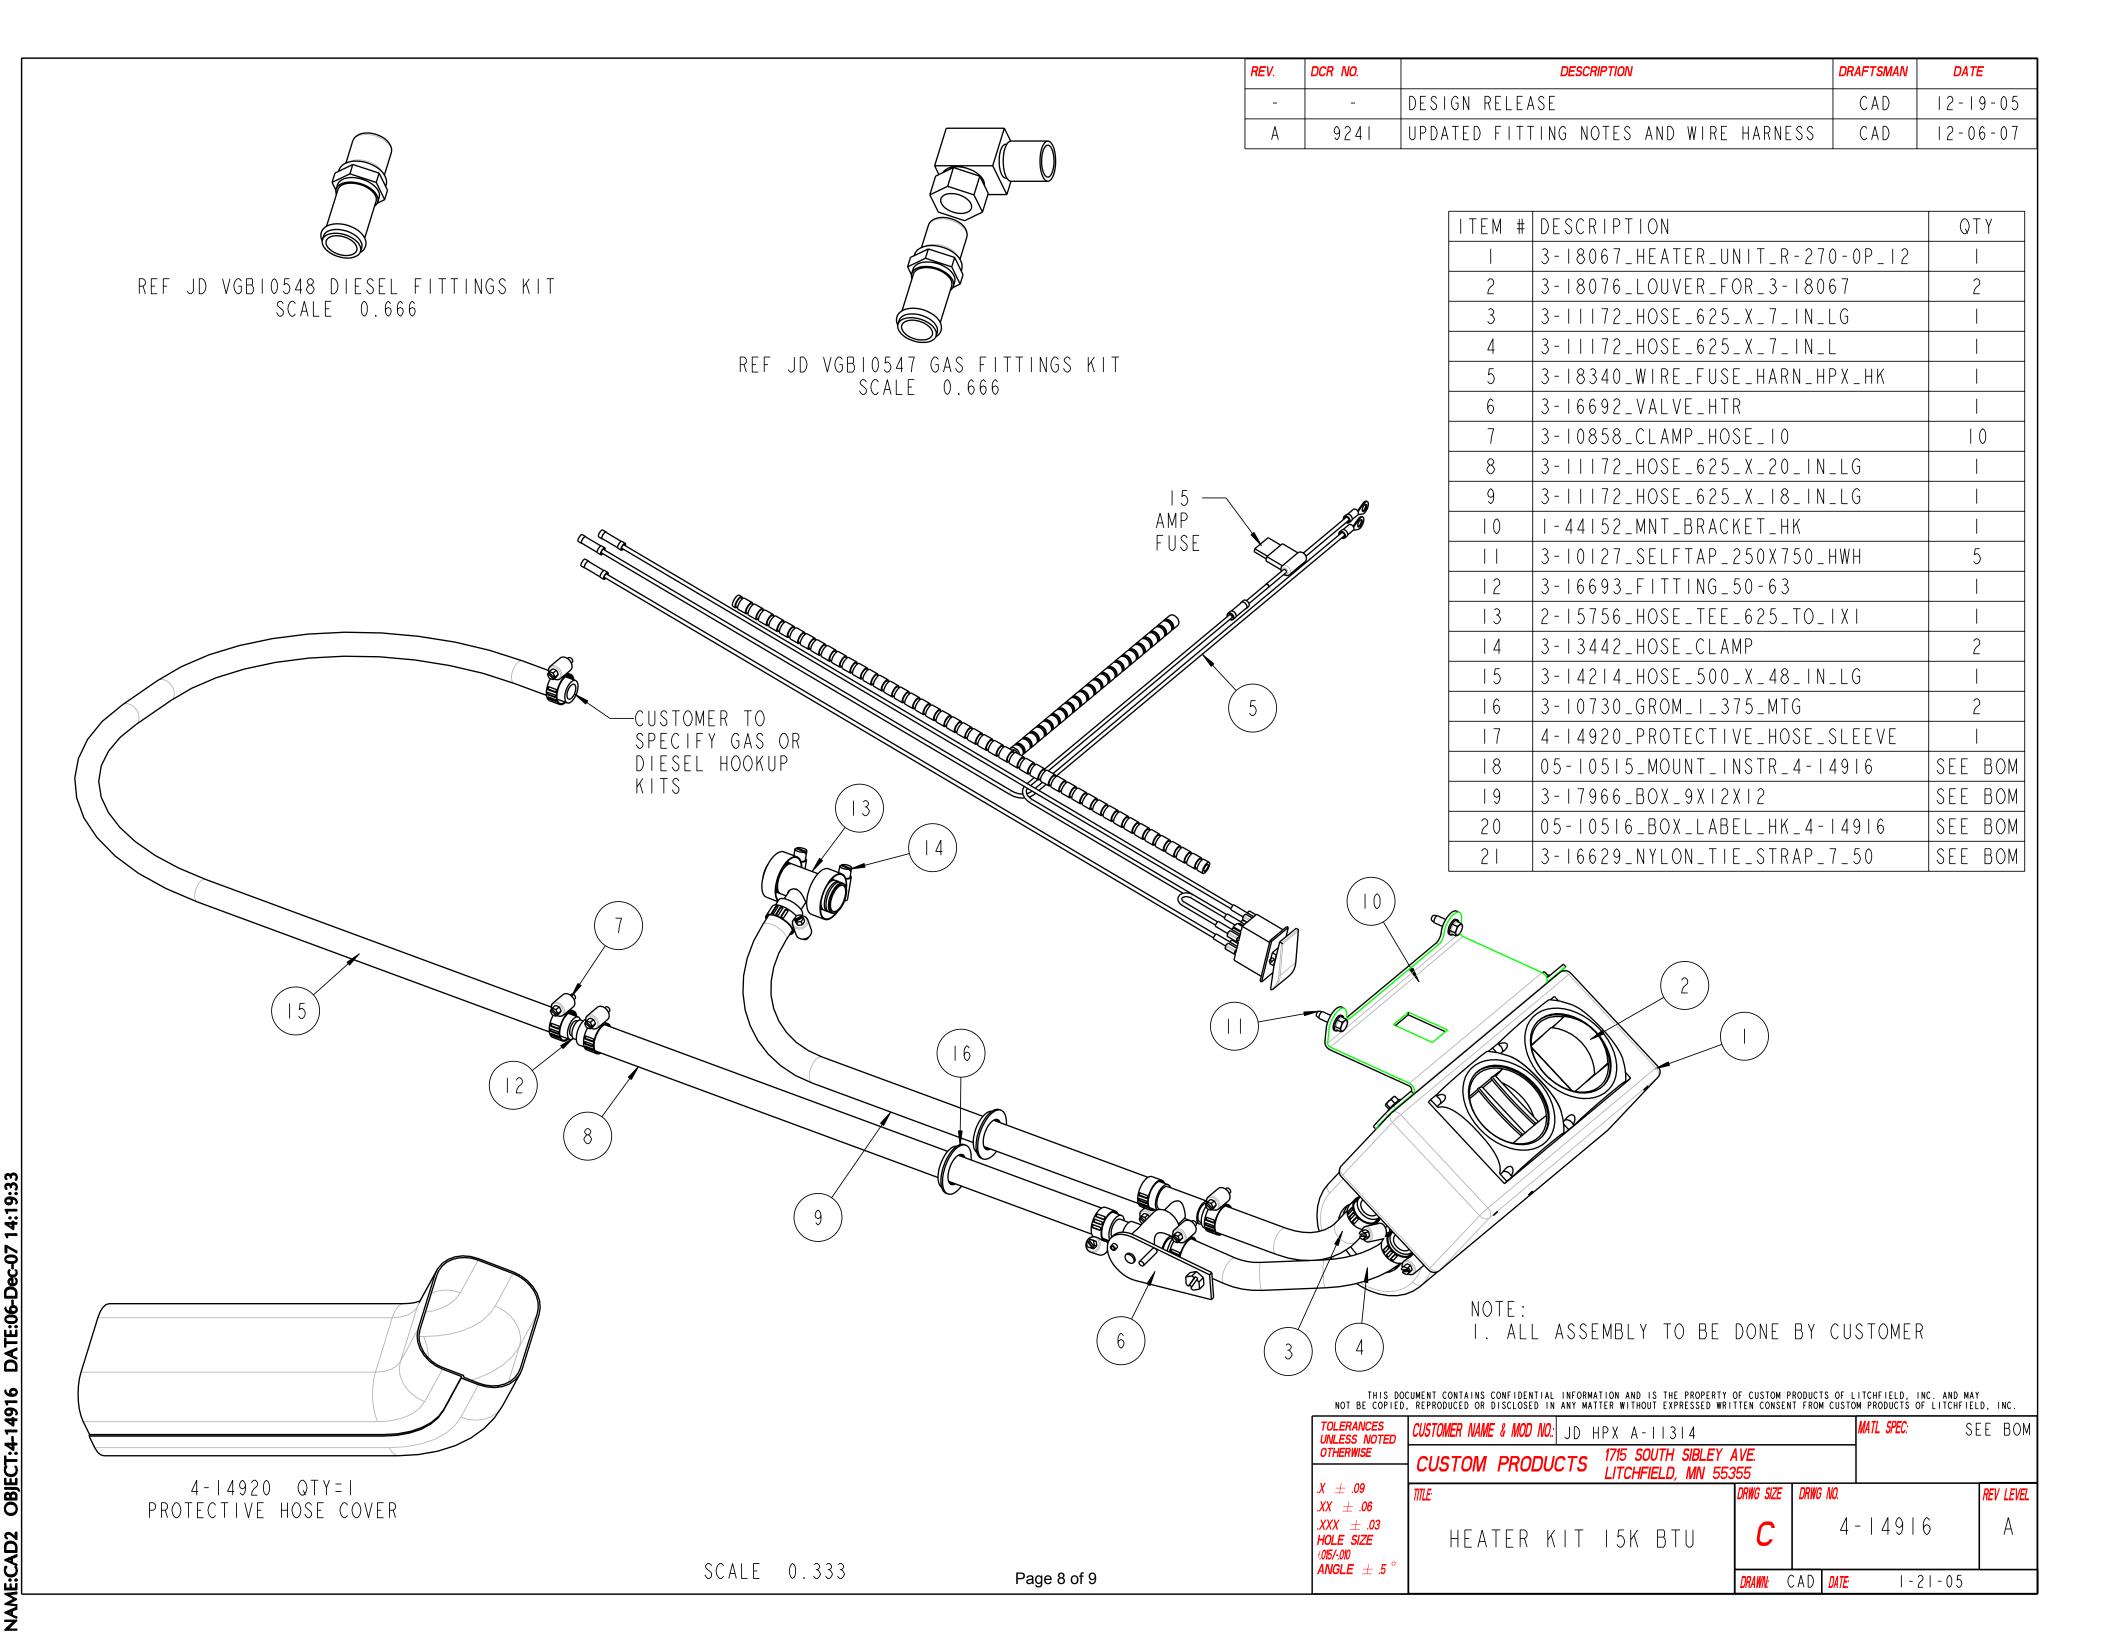

REV. DCR NO. **DRAFTSMAN** DATE **DESCRIPTION** SWITCH LEGEND REPLACED BUTT CON WITH DUESTCH CON CAD12-19-05 TERMINAL 1/8 -LO SPEED (RED 24") Α TERMINAL 2 AND 5 (JUMPERED) POWER IN OMITTED TEE TAP; ADDED TERM EYE 9241 CAD12-06-07 TERMINAL 6 -HI SPEED (ORANGE 24") -GND (-NEG) (UNDER PASSENGER SEAT POWER SOURCE) BLACK 30" LG (GND) FROM GROUND TO HEATER UNIT CON -POS (+12VDC) ITFM # DESCRIPTION QTY 3-18231_FUSE_HOLDER_ATO_ATC 3-17060_FUSE_15_AMP 3 3-10672_BUTT_SPLICE_I4GA_BLUE 3-10364_WIRE_RED_14GA_30 3-15133_WIRE_LOOM_375_X18_ 3-15133_WIRE_LOOM_375X18 3-10345_WIRE_BLACK_14GA_30 2 AND 5 JUMPERED 3-11434_TERM_CON_250_STUD_BLU 8 -RED 24" (LO) 3-10670_BLADE_CON_250_14GA_BLUE 9 -BLACK (GND -12VDC) NAME:CAD2 OBJECT:3-18340 DATE:06-Dec-07 14:16:36 3-18190_RCKR_SW_OFF_ON_ON_UNLIT 10 3-10364_WIRE_RED_14GA_X_24 3-14011 WIRF ORANGE 14GA 24 13 3-10346_WIRE_RED_14GA_X_4 ORANGE 24" (HI) | 4 3-18191_RCKR_SW_ACTIVATOR_BLACK -(TO HFATFR UNIT) THIS DOCUMENT CONTAINS CONFIDENTIAL INFORMATION AND IS THE PROPERTY OF CUSTOM PRODUCTS OF LITCHFIELD, INC. AND MAY NOT BE COPIED, REPRODUCED OR DISCLOSED IN ANY MATTER WITHOUT EXPRESSED WRITTEN CONSENT FROM CUSTOM PRODUCTS OF LITCHFIELD, INC. CUSTOMER NAME & MOD NO.: | JD HPX SEE BOM UNLESS NOTED OTHERWISE 1715 SOUTH SIBLEY AVE. CUSTOM PRODUCTS LITCHFIELD. MN 55355 $.X \pm .09$ DRWG SIZE DRWG NO. REV LEVEL SCALE 0.330 $.XX \pm .06$ 3-18340 $.XXX \pm .03$ В WIRE HARNESS HOLE SIZE +.015/-.010 Page 9 of 9 DRAWN: CAD DATE: 1-24-05