MOUNTING INSTRUCTIONS




# A-12144 FRONT LED WORK LIGHTS KIT FOR JD 20 SERIES COZY CABS A-11858

Before you begin, read these instructions and identify all components. Please retain these instructions for future reference and parts ordering information.

Note: Cab should be installed prior to installing this kit.

Kit Components:	ITEM	QTY	DESCRIPTION	P/N
	1	2	MOUNT BRACKET, FRONT LIGHTS	1-48797
	2	2	FLAT WASHER, .25"	3-10084
	5	1	FUSE, 5 AMP	3-18672
	6	4	NYLON TIE, BLACK	3-16629
	8	1	ROCKER SWITCH BODY	3-18189
	9	1	ROCKER SWITCH ACTUATOR	3-18514
	10	1	WIRE HARNESS, FRONT LIGHTS	3-19322
	11	4	BOLT, 5/16" x .75" LONG, BUTTON TORX HEAD	3-19340
	12	1	WIRE HARNESS, FUSE BLOCK TO SWITCH	3-19686
	13	2	LIGHT, LED ROUND BULLIT	3-20245
	14	4	NUT, 5/16" FLANGE NYLOCK	3-20329

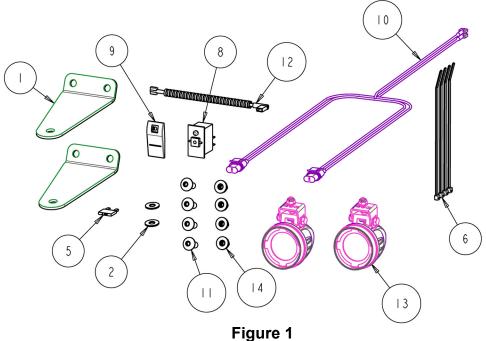


(Parts Identification)

### MOUNTING INSTRUCTIONS


#### **INSTALLATION STEPS;**

- 1) Disconnect battery. Remove front bolts that secure front of roof to cab.
- 2) Secure each work light (13) with ¼" flat washer (2) to light mount bracket (1), using metric hardware supplied with each light (Figure 2).
- 3) Remove (4) 3/8" hole plugs from front of cab, just above the front window (Figure 2).
- 4) Secure each work light with bracket onto front of cab using (Figure 2);
  - (2) 5/16" x .75" long bolts (11)
  - (2) 5/16" nylock flange nuts (14)
- 5) Connect mating ends of front lights wire harness (10) to each front light (13).
- 6) Route remaining end of wire harness (10) from each work light to the switch panel fuse block location (Figure 2).
- 7) From inside of cab, remove 4 bolts that secure the overhead switch panel. Allow panel to tip down.

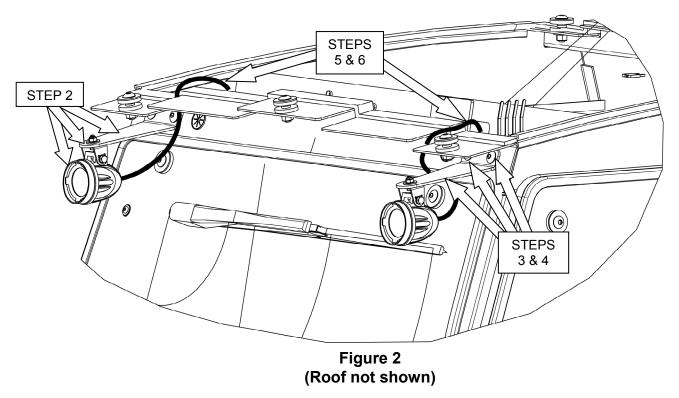

- 8) Select an empty location on switch panel to install rocker switch (8). Remove rectangular knockout (Figure 3).
- 9) Route switch end of wire harness (10) through switch knockout. Connect red wire to rocker switch (8) terminal 3 (Figures 3 & 4).
- 10) Connect black wire of harness (10) labeled -12VDC Lights to ground terminal of fuse block (Figures 3 & 5).
- 11) Remove fuse block access cover from switch panel and select an empty fuse terminal location (Figure 5). Connect 90 degree end of wire harness to the empty fuse terminal location (Figures 3 & 5).
- 12) Connect remaining end of fuse block to switch wire harness (12) to the empty fuse terminal location through switch knockout hole and connect to rocker switch (8) terminal 2 (Figures 3 & 4).
- 13) Attach switch actuator (9) to rocker switch (8), then install switch into knockout (Figure 3).
- 14) Install 5 amp fuse into fuse block location selected in Step 11 (Figure 5).

## MOUNTING INSTRUCTIONS

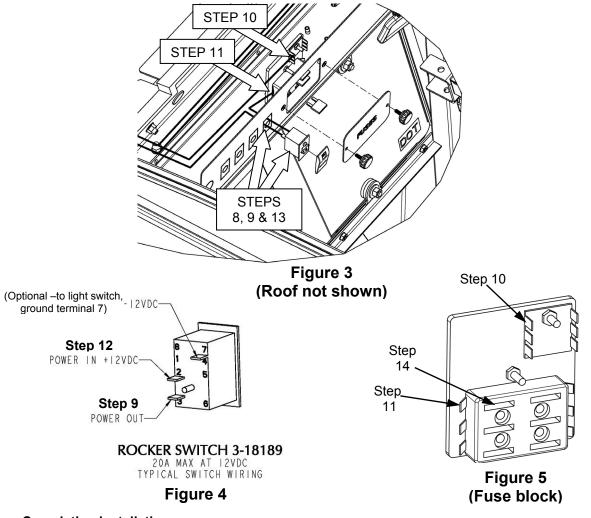

# Completing installation:

15) Re-connect battery. Turn tractor's ignition key to "On".

16) Turn lights on and off to check proper operation. Check coverage area and adjust lights if needed.

- 17) Secure wire harnesses using nylon ties (6).
- 18) Re-install roof, switch panel and fuse block access cover.

