


Rear Slider Window A-11763

For JD X Series MY10 Cabs

Mounting Instructions

1. Remove factory installed non-sliding rear window, using the window rubber tool provided.
2. Remove the existing window rubber.
3. Install the 1/4" offset window rubber (3-10649) provided into the cab window opening.
4. Set the slider window into the bottom channel of the window rubber with the handle to the inside of the cab.
5. Using the window rubber tool, push the slider frame into the window rubber channel. Zip the window rubber closed.
6. Installation is complete. Open and close window to check slider operation.

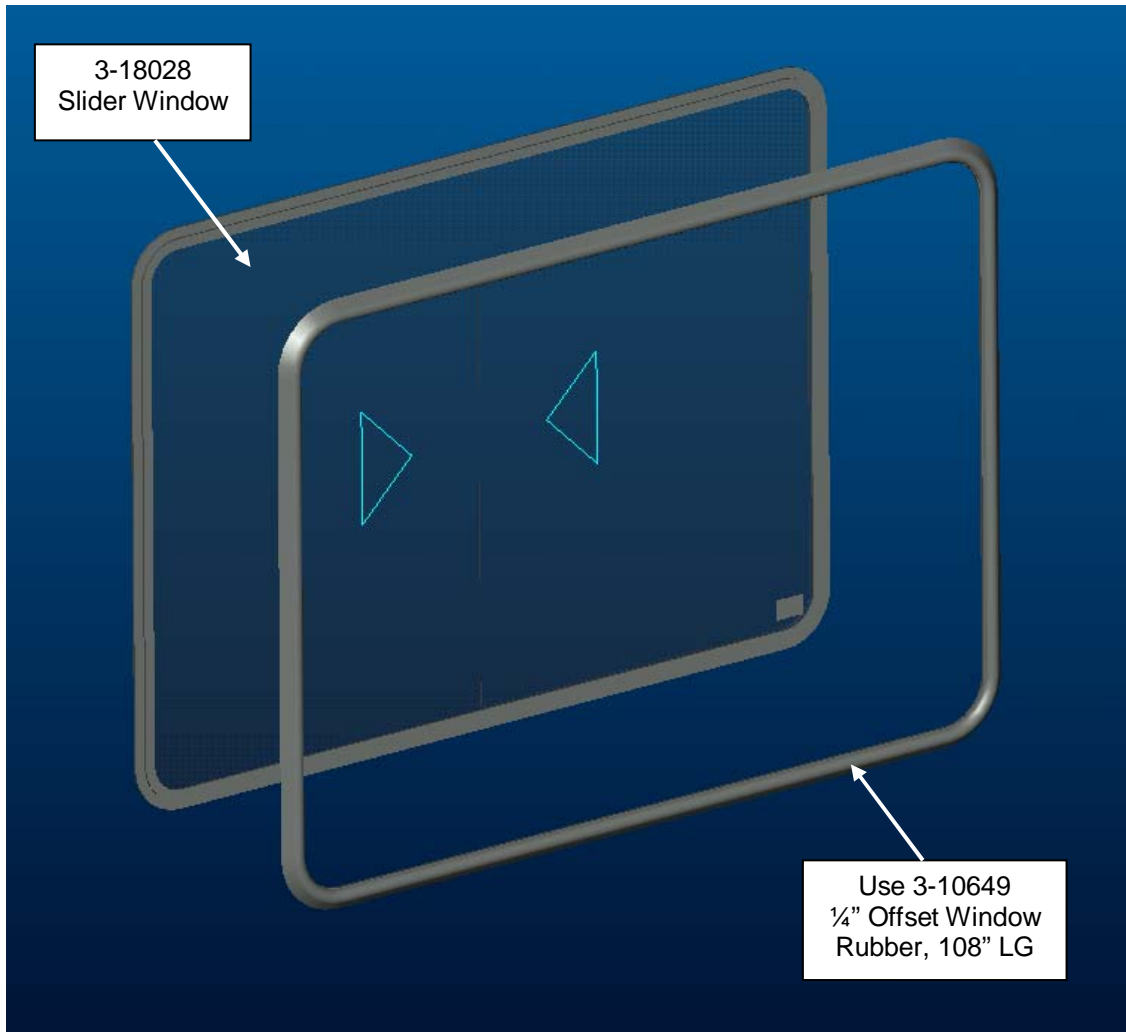

Any questions regarding installation or operation of this product, contact;



P O Box 70, Litchfield, MN 55355
Phone: (320) 693-3221 Fax: (320) 693-7252
Visit our web site at: www.800cabline.com