

INSTALLATION INSTRUCTIONS

A-11840 Interior Mirror Kit, 5-Panel




Vehicle set up instructions;

This interior mirror kit is designed to be used with Cab kit A-11836 or Sunshade kit A-11837, model year 2010 and newer, Multi-Pro 5800 Sprayer Vehicles equipped with a ROPS

Preparation of machine;

1. If Cab or Sunshade Kit is not installed, do so prior to installing this kit.
2. Unpack and identify components.
3. Secure LH and RH mount brackets to front cross member using (2) 1/4 x 3/4" long HHCS, (2) 1/4 flat washers and (2) 1/4 lock washers as shown in Figure.
4. Secure 5-panel mirror to LH and RH mount brackets using knobs and hardware supplied with mirror.

Parts list;	ITEM	QTY	DESCRIPTION	CP P/N
	1	1	MIRROR ASSEMBLY, 5-PANEL, WITH MISC HDWR	3-19555
	2	1	LH MOUNT BRACKET	1-47080
	3	1	RH MOUNT BRACKET	1-47081
	4	2	1/4 x 3/4" LONG, HHCS	3-10219
	5	2	1/4 LOCK WASHER	3-10076
	6	2	1/4 FLAT WASHER	3-10084

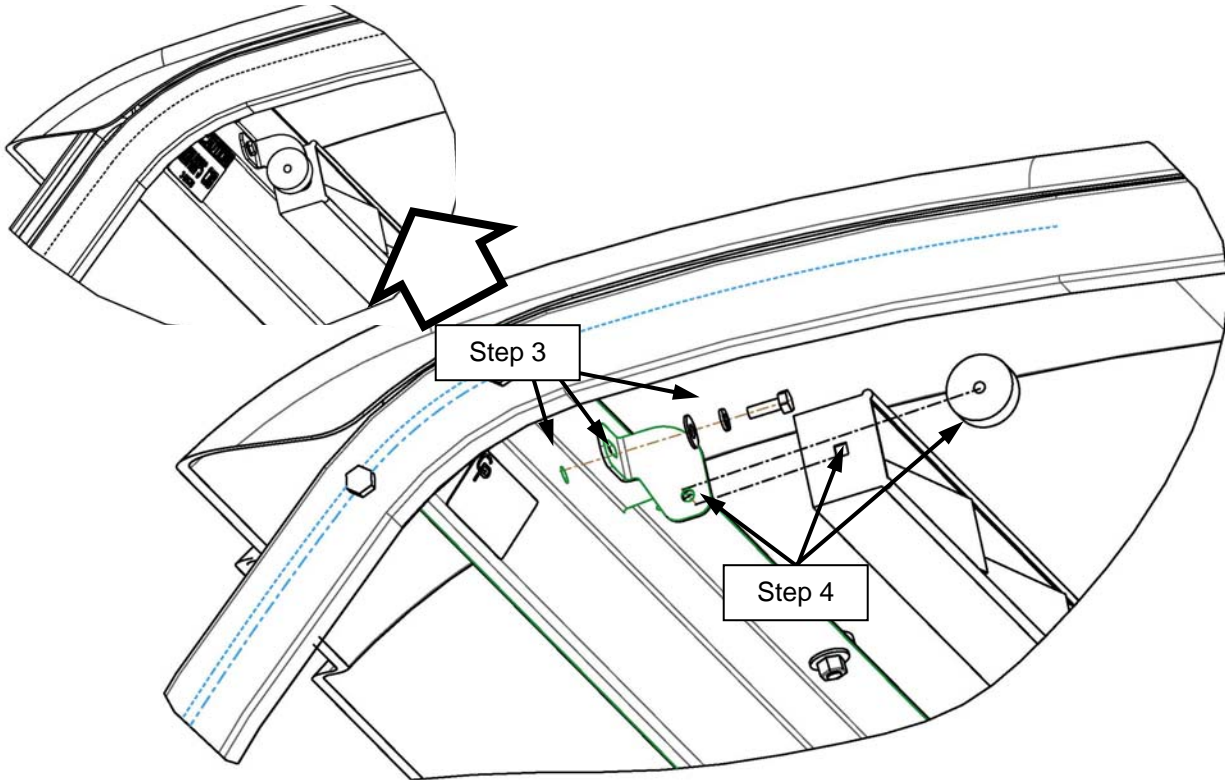

Installation is now complete. For questions or comments, contact;



PO BOX 70, 1715 S. Sibley Avenue, Litchfield, MN 55355-0070
Ph: (320) 693-3221 Fax: (320) 693-7252
Website: www.800cabline.com