INSTALLATION INSTRUCTIONS John Deere One Series and 20 Series





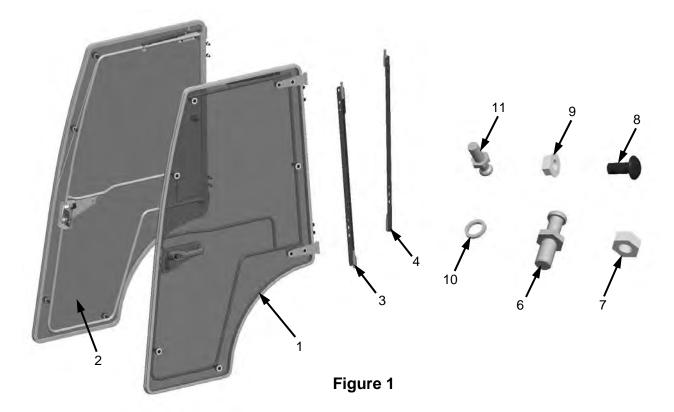
A-11859 TEMPERED GLASS DOORS KIT

Fits Cab Kit A-11858 for 20 Series tractors and Cab Kit A-11976 for One Series tractors

INSTALLATION INSTRUCTIONS John Deere One Series and 20 Series

Read these instructions and identify all components. Please retain these instructions for future reference and parts ordering information. Refer to kit components and Figure 1 for general layout.

Kit Components:	ITEM	QTY	DESCRIPTION	P/N
	1	1	DOOR ASSEMBLY, LH	4-15556
	2	1	DOOR ASSEMBLY, RH	4-15557
	3	1	DOOR MOUNT BRACKET, LH	2-16507
	4	1	DOOR MOUNT BRACKET, RH	2-16508
	5	1	HARDWARE KIT (CONSISTS OF ITEMS 6-11)	4-15558
	6	2	STRIKER STUD, 10 MM	3-18069
	7	2	10MM HEX JAM NUT	3-18070
	8	8	5/16 X 3/4" LONG, TRUSS BUTTON TORX BOLT	3-19340
	9	8	5/16" FLANGE NUT	3-17111
	10	4	BRASS HINGE WASHER	B3-15971
	11	2	BALL STUD FOR GAS SPRING	3-11821



INSTALLATION INSTRUCTIONS John Deere One Series and 20 Series

Note: Cab kit must be installed prior to installing this kit!

Installation of doors:

- 1. Remove knock-outs from rear cab side panel (Figure 2).
- 2. Secure hinge mount bracket (3 LH) (4 RH) onto rear cab side panel and secure (Figure 2);
 - (8) 5/16 x 3/4" long, truss button torx head bolts (8)
 - (8) 5/16" flange nuts (9)
- 3. Place brass washer (10) onto each hinge pin location (Figure 2).
- 4. Install each door (1 LH) (2 RH) onto corresponding hinge bracket.
- 5. Install striker stud (6) and jam nut (7) to each LH and RH side frame striker mount (Figure 3).
- 6. Open and close door. Adjust striker and hinge mount brackets for proper alignment.
- 7. Install ball stud (11) into each side header of cab (Figure 3).
- 8. Remove nylon tie that secures gas spring to door frame tube (Figure 3).
- 9. Connect gas spring end to ball stud (Figure 3).

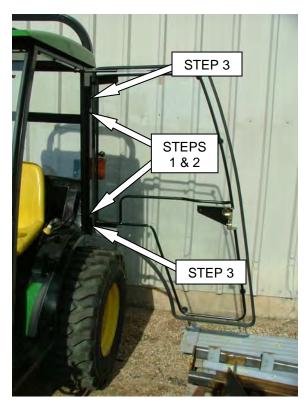


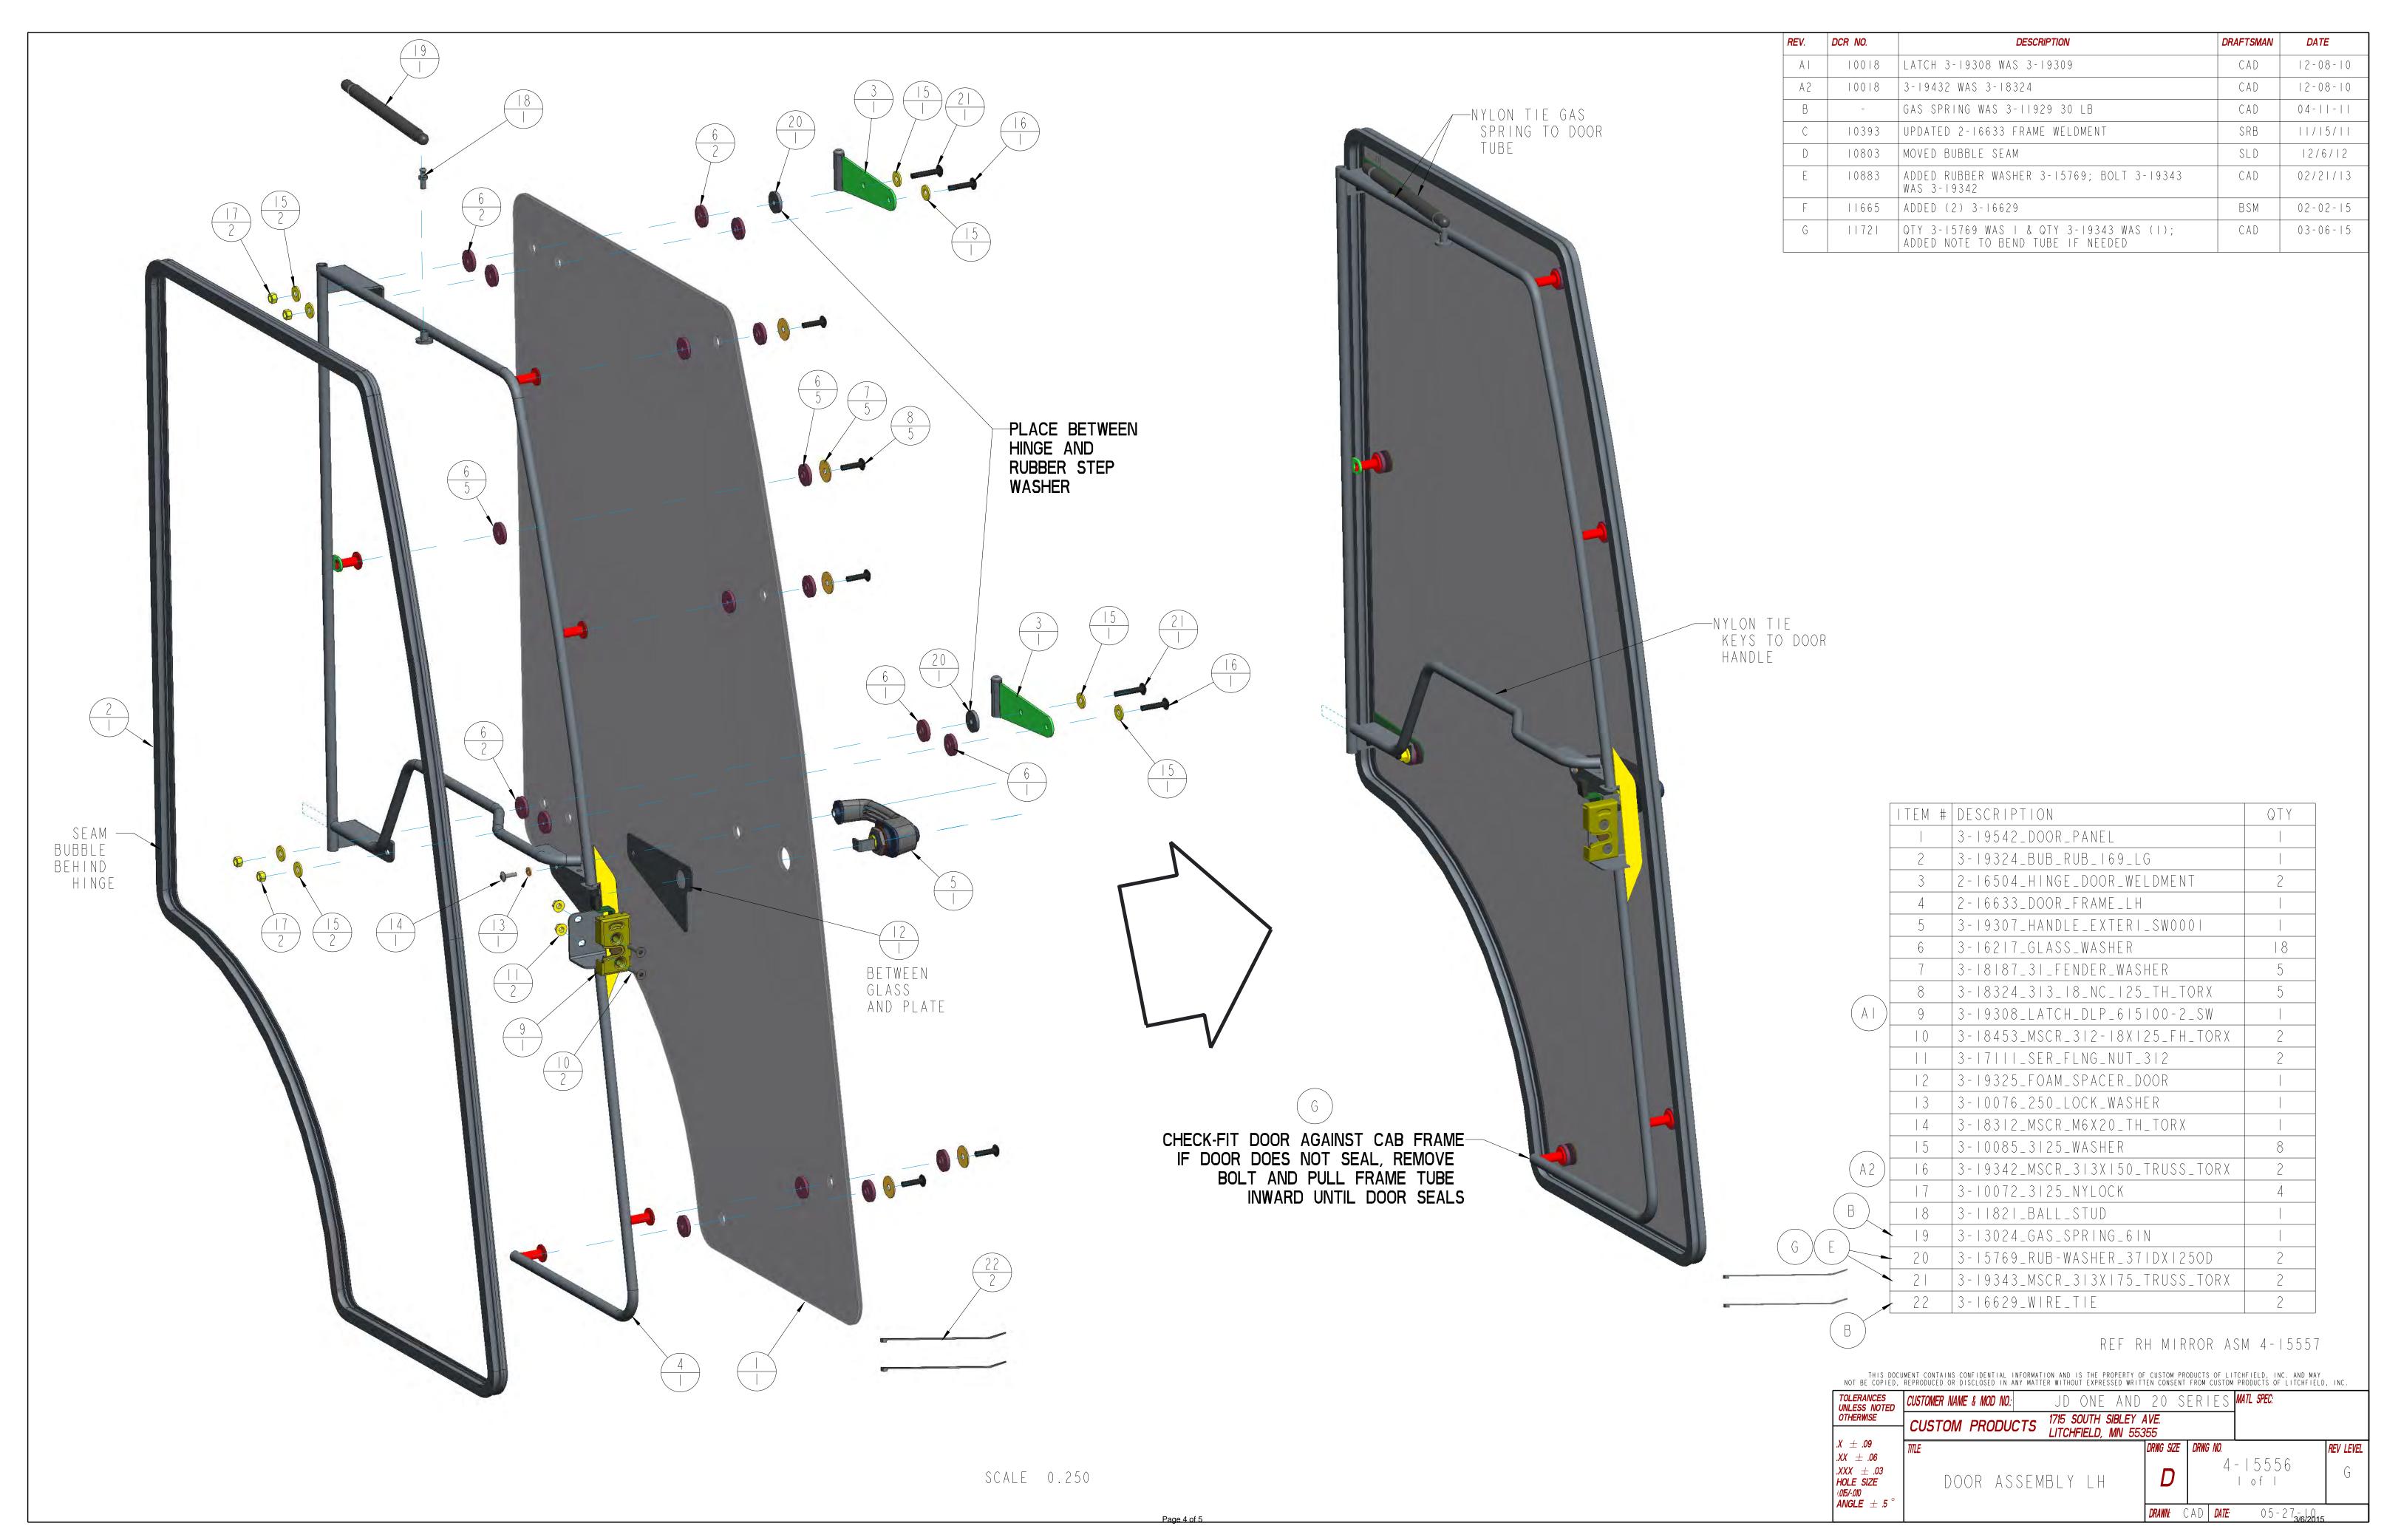


Figure 2 Figure 3

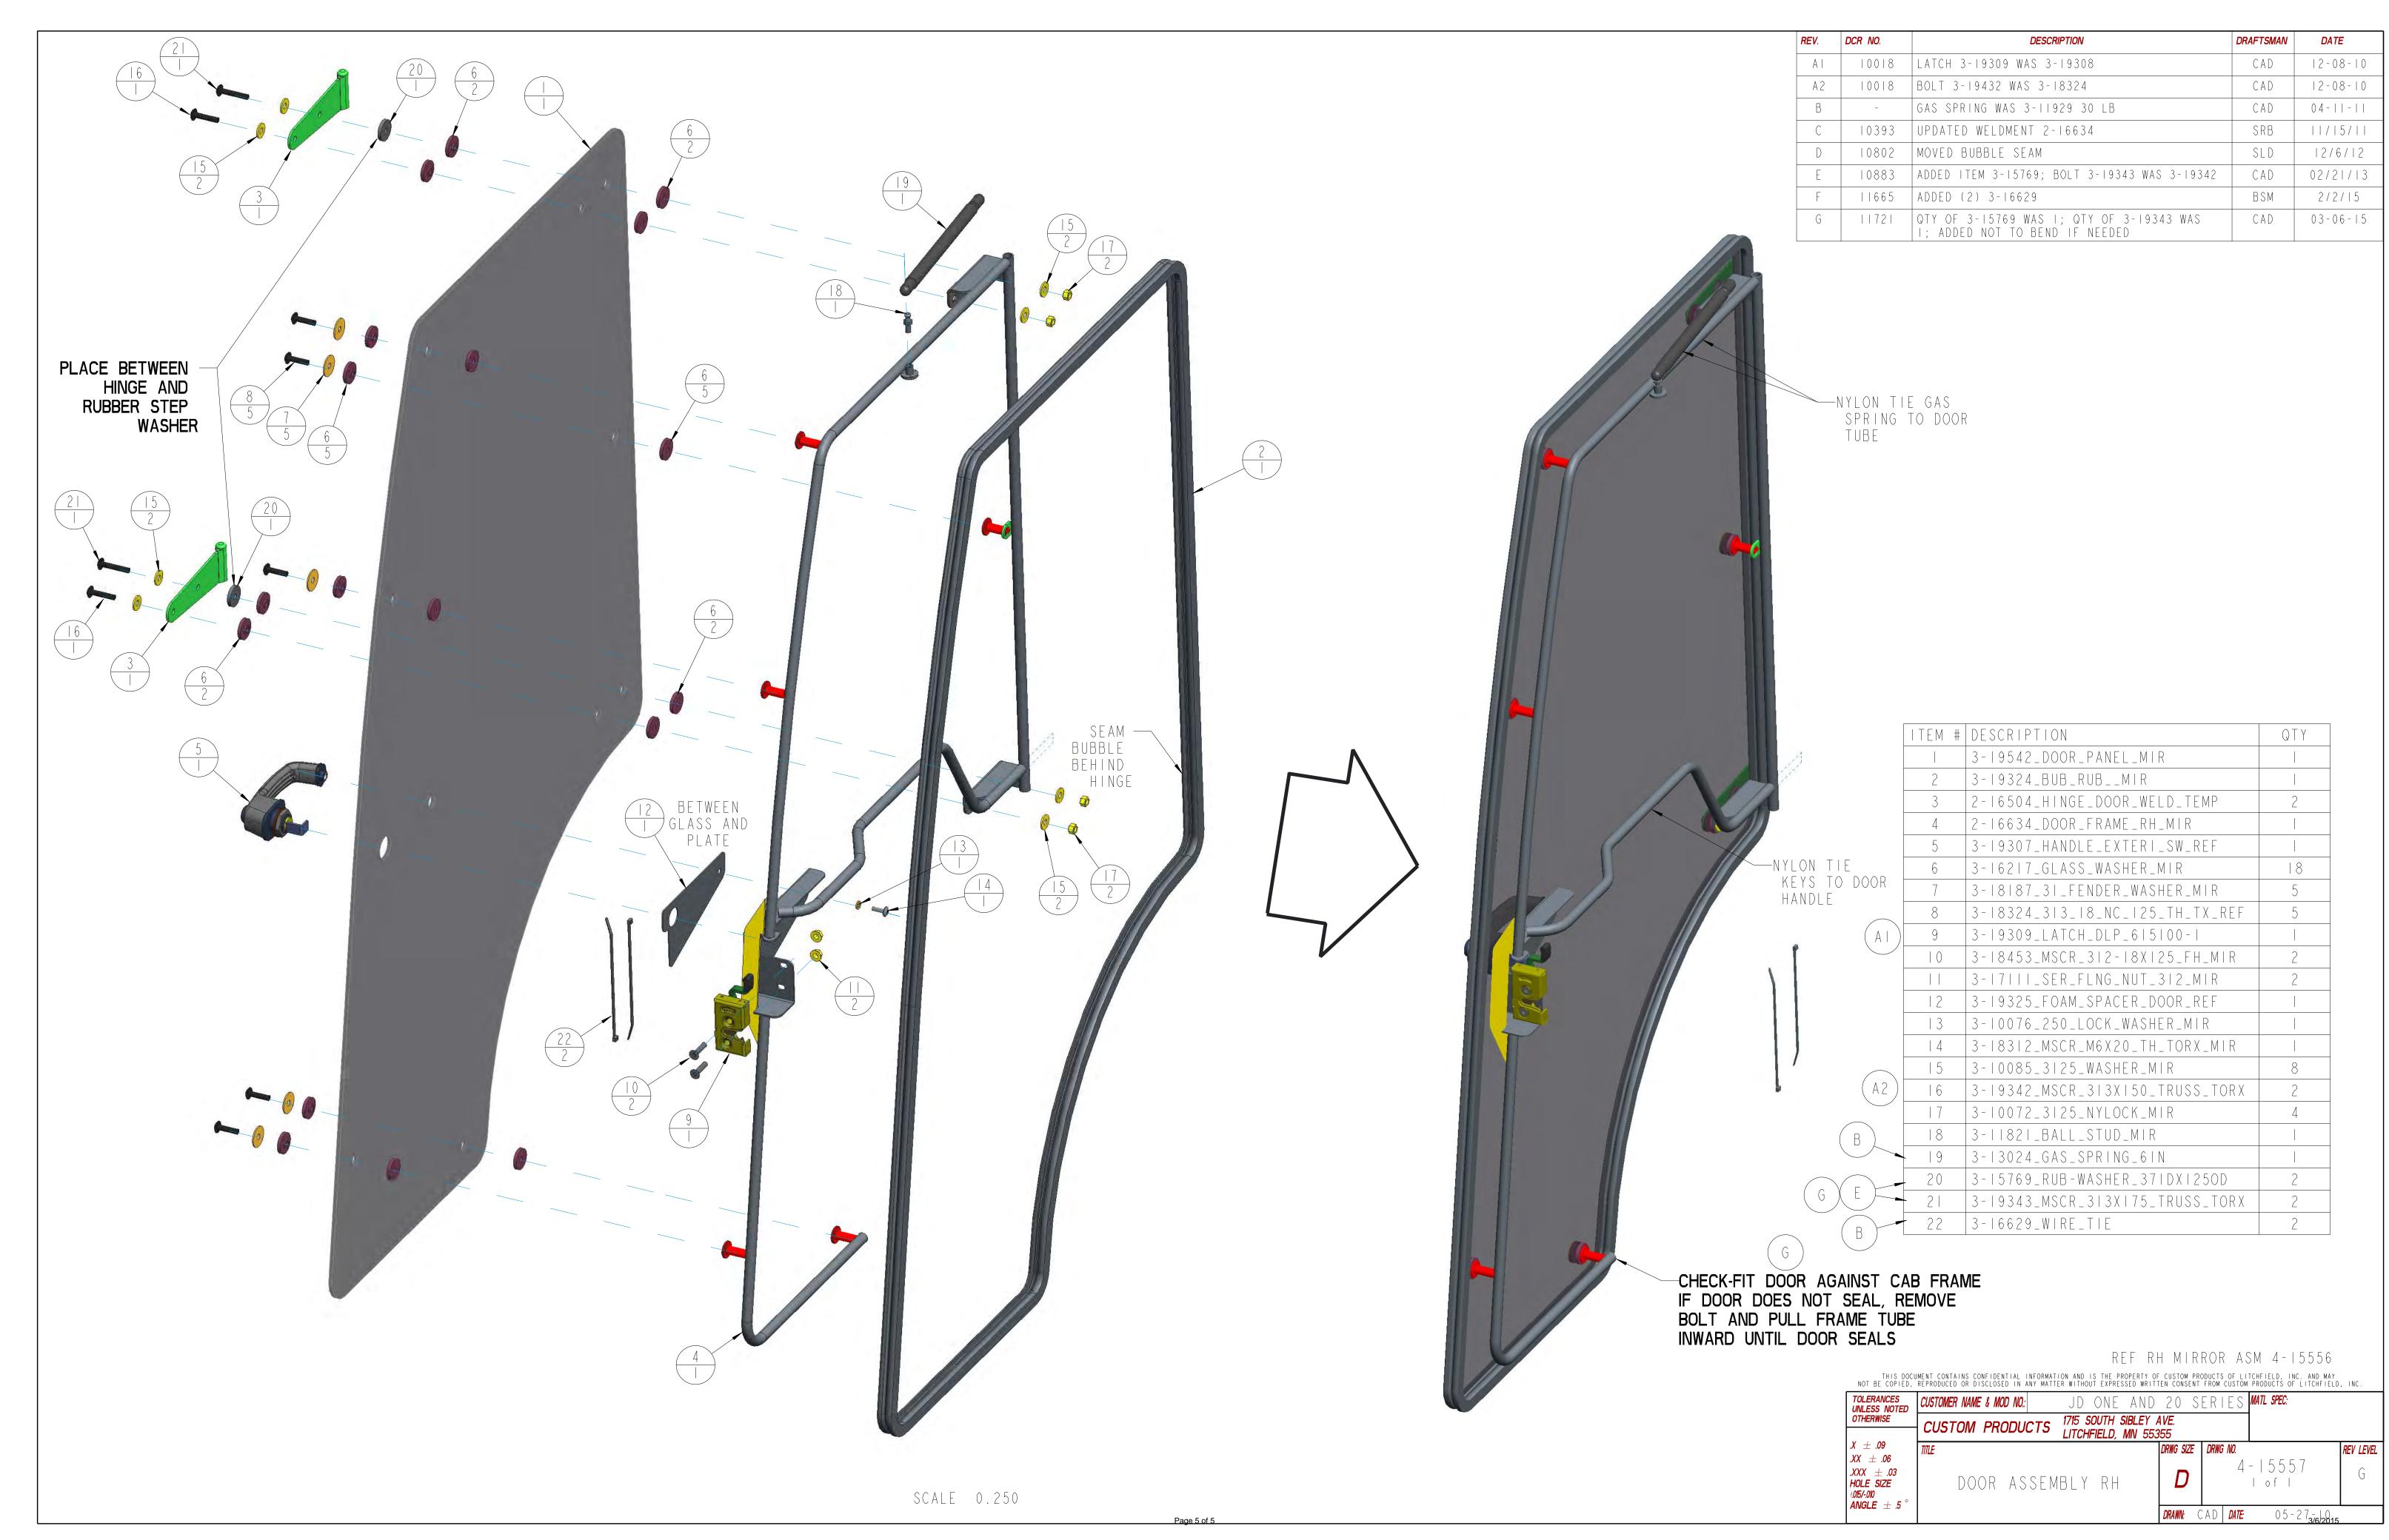
Installation is now complete. If you have any questions or comments, contact;



PO BOX 70, 1715 S. Sibley Avenue, Litchfield, MN 55355-0070 Ph: (320) 693-3221 Fax: (320) 693-4833 www.CPcabs.com



NAME:CAD2 OBJECT:4-15556



IAME