



A-11822 QUICK DISCONNECT KIT FOR 5/8" HEATER HOSE

Before you begin, read these instructions and identify all components. Please retain these instructions for future reference and parts ordering information. Allow machine's coolant to cool prior to installing kit.

For use on a machine with cab where heater unit is present and coolant is a source for heat using 5/8" heater hoses.

Kit Components:	ITEM	QTY	PART NO.	DESCRIPTION
	1	2	3-19459	FITTING, INSERT, QUICK D/C FOR 5/8" HOSE
	2	2	3-19460	FITTING, BODY, QUICK D/C FOR 5/8" HOSE
	3	4	3-10858	HOSE CLAMP, No. 10
	4	1	05-11032	MOUNTING INSTRUCTIONS FOR A-11822

INSTALLATION:

1. Select a hose location to install kit. Make sure location is approximately the same location on both hoses.
2. Install fittings as shown in figure 1.
3. When cab is removed, loop hoses together, to prevent leakage.

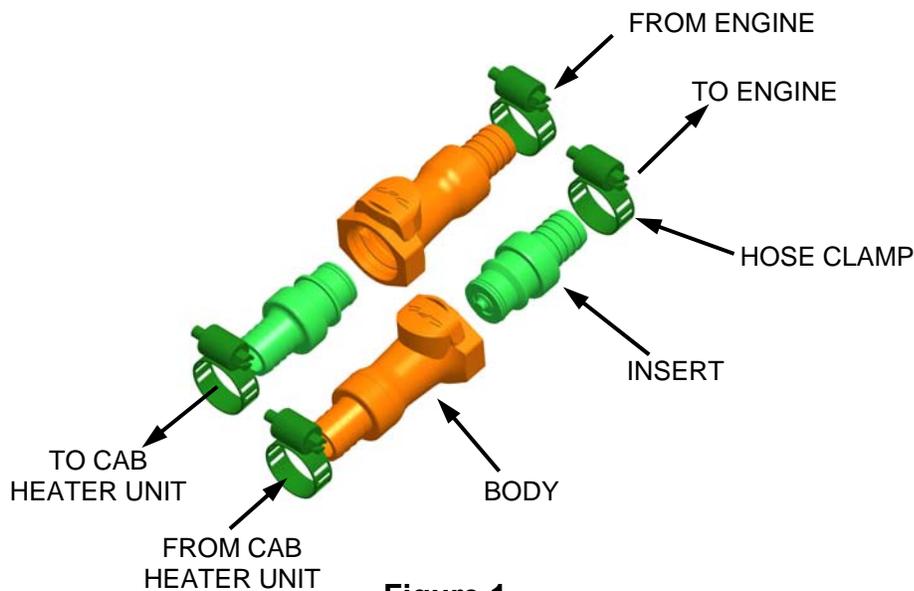


Figure 1

Manufactured by:


BOX 70 • LITCHFIELD, MINNESOTA 55355-0070
(320) 693-3221 Fax: (320) 693-4833
www.CPcabs.com

05-11032_MOUNT_INSTR_QUICK_D-C_KIT
February 18, 2010