

COZYcab™

Mounting Instructions With Parts Listing And Drawing



Sunshade Kit for JD 1400-1500 With ROPS Part No.

A-11287

Manufactured by:

CUSTOM PRODUCTS
OF LITCHFIELD, INC.

BOX 70 • LITCHFIELD, MINNESOTA 55355-0070

Ph: (320) 693-3221 Fax: (320) 693-7252

1-800-222-5463

www.800cabline.com

05-10426
June 2003

JD 1400-1500 Sunshade Kit A-11287

MOUNTING INSTRUCTIONS

Preparation of Tractor

1. Park tractor on level surface. Engage parking brake. Shut off engine.

Assembly of Frame

2. Pre-assemble the structural frame; Reference drawing 8-14704, sheets 1 and 2.
3. Start by assembling the horizontal support tubes 6-43060 into the rear mount plate 7-15806, securing components with 5/16" fasteners.
4. Secure front mount bracket 7-15805 to the front of the horizontal support tubes 6-43060 and secure with 5/16" fasteners.
5. Assemble front upright supports 6-43062 to the front mount bracket 7-15805.

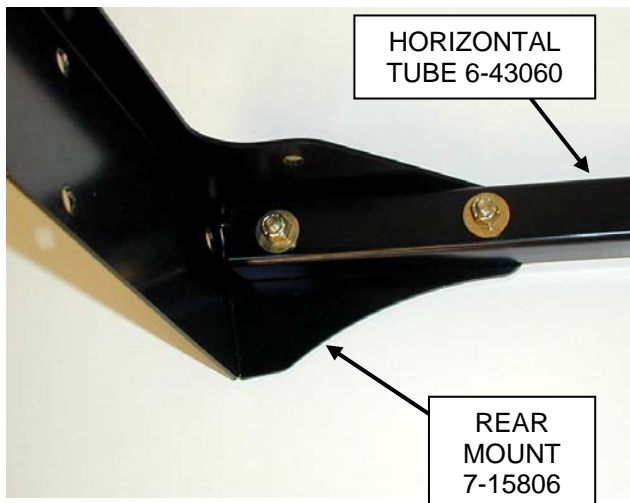


Figure 1

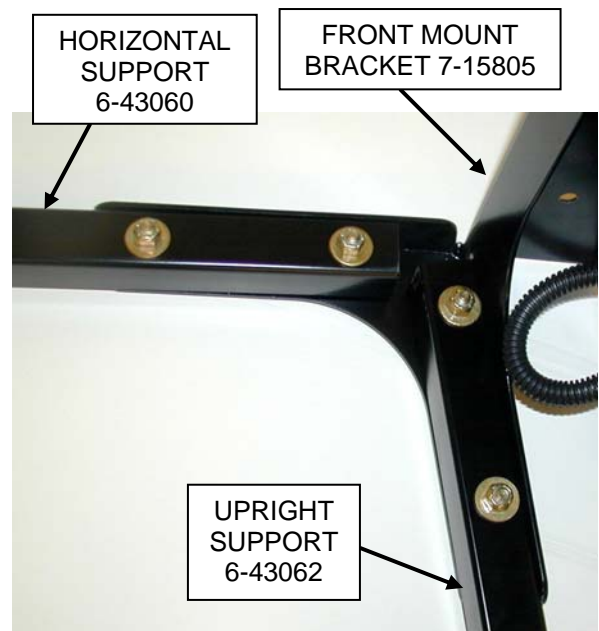


Figure 2

6. Assemble front lower mount brackets 6-43063 and 6-43064 to front upright supports 6-43062. See figure 3.
7. Apply (2) protective adhesive pads 3-18011 to the bottom of each front lower mount brackets 6-43063 and 6-43064. See figure 3.

JD 1400-1500 Sunshade Kit A-11287 MOUNTING INSTRUCTIONS

Drill front mount holes in deck

8. The kit is shipped with a marking template 6-43090 for drilling holes in the front deck of tractor.
9. Locate template from kit.
10. Center template using the center notch and the column's center
11. Position bottom two edges of template at the deck seem.
12. Set template and transfer mark the holes.
13. Drill all 4 holes to 7/16" diameter. See figure 4.

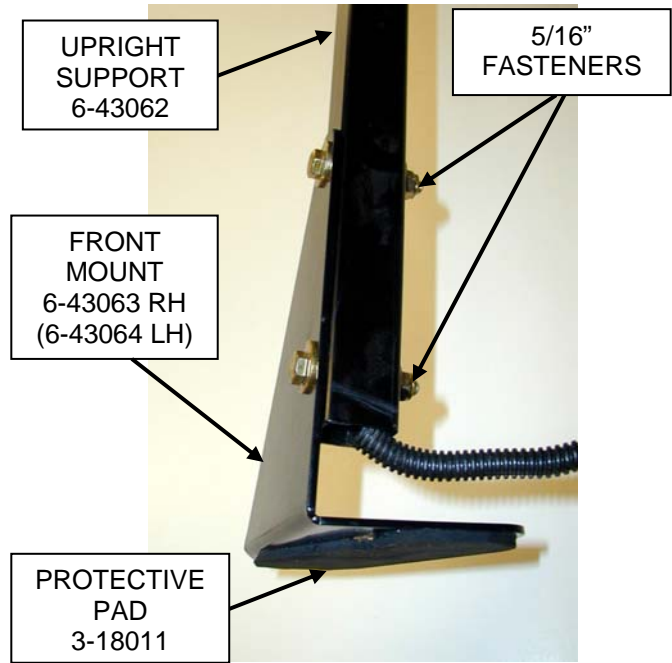


Figure 3

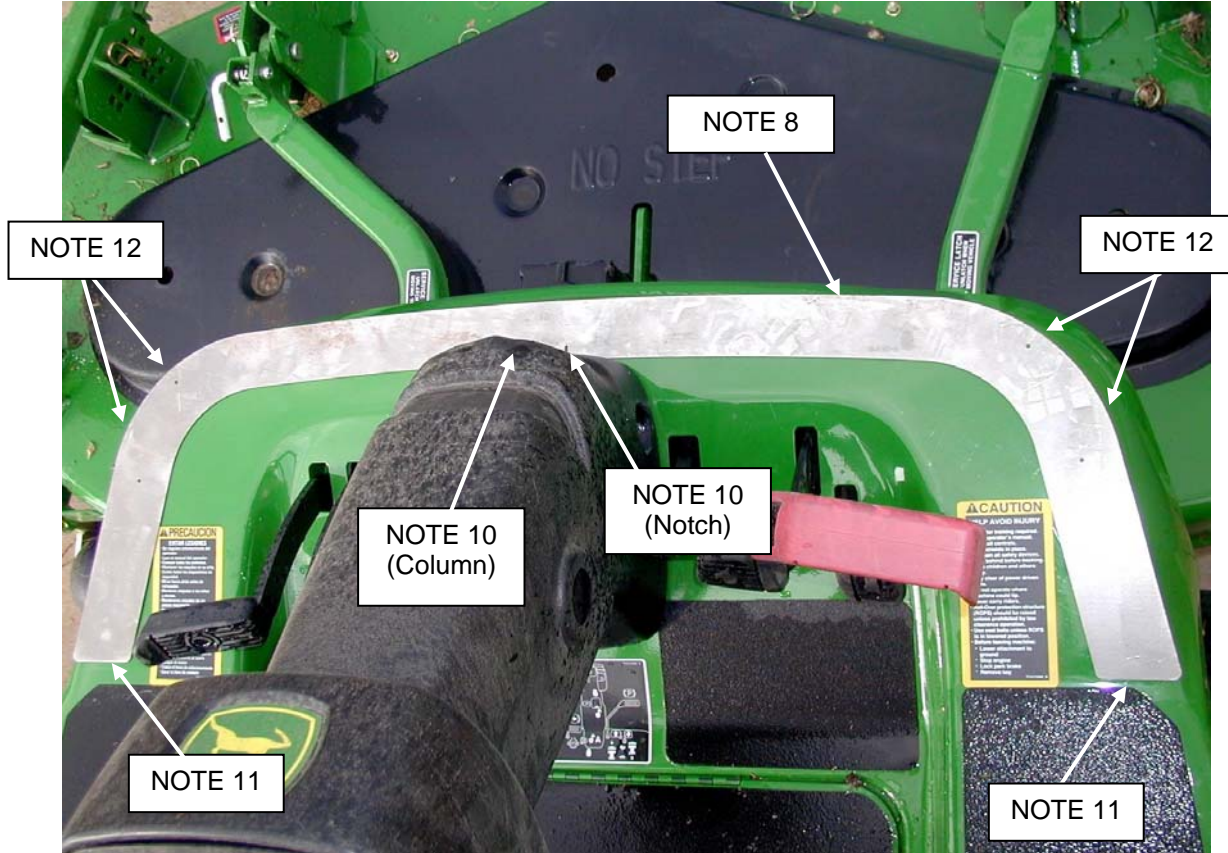


Figure 4

05-10426
June 2003

JD 1400-1500 Sunshade Kit A-11287 MOUNTING INSTRUCTIONS

14. Secure front mounts with 5/16" fasteners and flat washers. See Figure 5.
15. Set frame structure onto machine and secure with (2) 3/8" square U-bolts 3-18000 and center frame against the roll bar. See Figure 6.
16. Secure front lower mounts to tractor deck using 3/8" fasteners and flat washers. See Figure 5.
17. Tighten all fasteners.

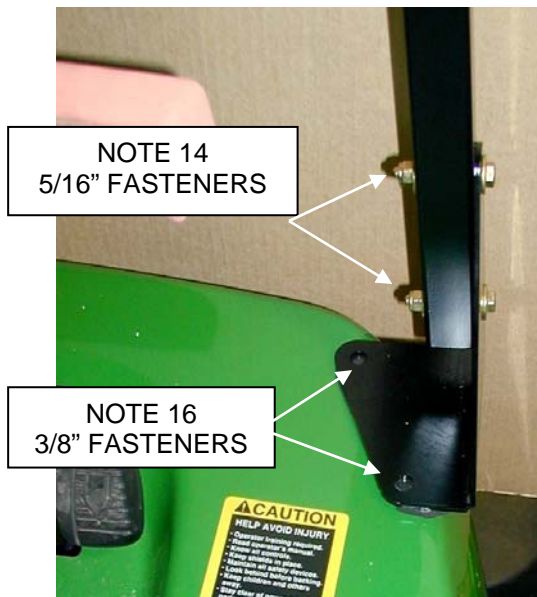


Figure 5

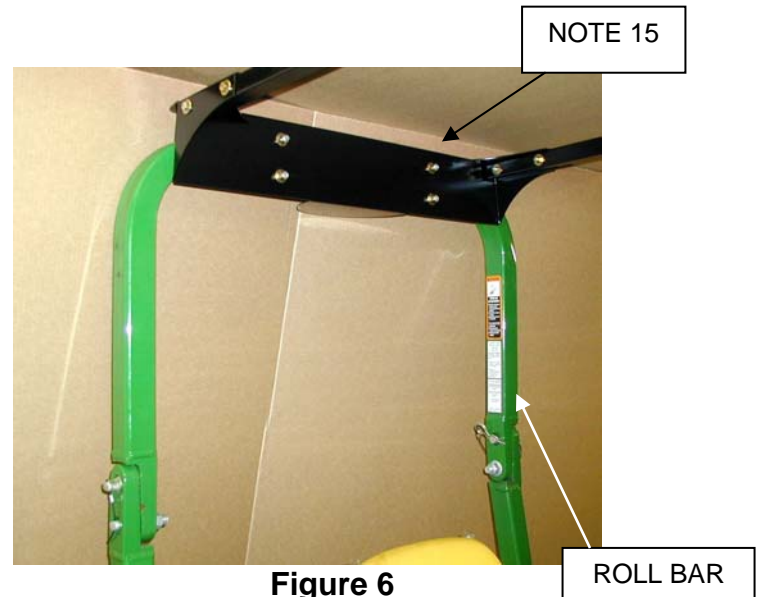


Figure 6

Secure Roof

18. Roof 3-17999 may be supplied with a protective plastic covering. Remove if present.
19. Secure roof using 5/16" fasteners. Sandwich the roof with (8) soft rubber mount washers 3-16217 and (4) hard cap mount washers 3-15768. See Figures 7 and 8. Verify correct fastener and washer stack up by referencing drawing 8-14704, Sheet 2, Section View E-E.



Figure 7

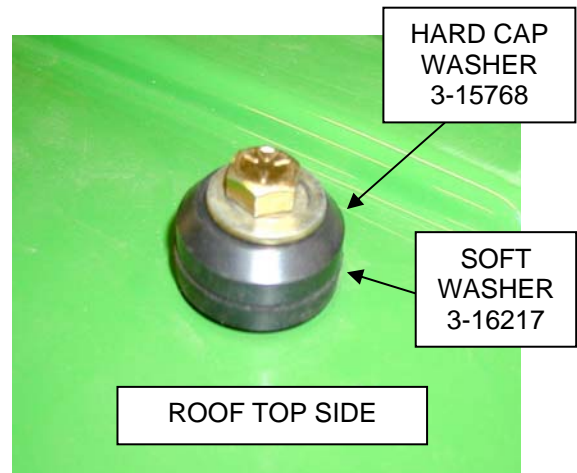


Figure 8

05-10426
June 2003

JD 1400-1500 Sunshade Kit A-11287 MOUNTING INSTRUCTIONS

Refer to additional mounting instructions if Options are to be mounted with the sunshade.

4-14710 3-Work Light Kit Option includes (2) front halogen lights and (1) rear halogen light (Mounting Instructions 05-10427), switches and hardware.

4-14711 Flashing Warning Light Kit Option includes (1) warning light with amber lens and mounting bracket (Mounting Instructions 05-10428), switch and hardware.

4-14712 Switch and Relay-Breaker Fuse Kit Option, required with either light kit 4-14710 or flashing warning light kit 4-14711. Includes wire relay-breaker harness, fuse block wire harness, protective wire ducting and hardware (Mounting Instructions 05-10429). Electrical wiring information is in this kit!

Sunshade for JD1400-1500 Model A-11287
MOUNTING INSTRUCTIONS – Replacement Parts List

<u>ITEM</u>	<u>QTY</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
1	1	3-17999	SUNSHADE ROOF GREEN STANDARD JD GREEN
2	1	7-15806	REAR MOUNT BRACKET
3	2	6-43060	UPPER HORIZONTAL SUPPORT TUBE
4	2	3-18000	U-BOLT FOR 2" SQUARE TUBE
5	8	3-10073	NYLOCK NUT 3/8-16UNC
6	4	3-13947	HEX HEAD SCREW 5/16-18UNC x 1.50" LG
7	8	3-16217	SOFT RUBBER MOUNT WASHER -LOWER
8	4	3-15768	HARD CAP WASHER
9	20	3-10072	NYLOCK NUT 5/16-18UNC
10	1	7-15805	FRONT MOUNT PANEL
11	2	6-43062	FRONT UPRIGHT SUPPORT TUBE
12	1	6-43063	FRONT LOWER MOUNT BRACKET RH
13	1	6-43064	FRONT LOWER MOUNT BRACKET LH
14	16	3-10012	HEX HEAD SCREW 5/16-18UNC x 2.00" LG
15	4	3-10394	HEX HEAD SCREW 3/8-16UNC x 1.25" LG
16	12	3-10086	FLAT WASHER, 3/8"
17	-	-	-
18	40	3-10085	FLAT WASHER, 5/16"
19	2	3-18011	PROTECTIVE FOAM PAD
20	1	1-43090	MOUNTING TEMPLATE
21	1	05-10426	MOUNTING INSTRUCTION MANUAL JD 1400-1500 SUNSHADE