



Mounting Instructions With Parts Listing and Drawing



Sunshade Kit for Toro Z-Master With ROPS Part No. A-11299

Manufactured by:



BOX 70 • LITCHFIELD, MINNESOTA 55355
Ph: (320) 693-3221 Fax: (320) 693-7252
1-800-222-5463 www.800cabline.com

05-10447
JUNE 2007

Toro Z-Master Sunshade Kit A-11299

MOUNTING INSTRUCTIONS

Preparation of Machine


1. Park machine on level surface. Engage parking brake. Shut off engine.

Assemble Sunshade

1. Install the side brackets to the sunshade. See detail A on the assembly print. The neck on the top rubber washers goes through the holes in the sunshade. The neck on the inner rubber washers goes through the holes in the side brackets. Do not tighten at this time.
2. Install the rear mount assembly to the side brackets. Check which of the 2 sets of holes will result in the sunshade being horizontal when mounted. See detail B and C on the assembly print. The bolted connection should be tightened so that the rear mount assembly can still be pivoted. Tighten the knobs with rubber washers so the washer is slightly compressed.
3. When the rear mount has been installed, tighten the side bracket mounting hardware. They should be tightened so the rubber washers are slightly compressed. **Do not overtighten.**

Install Sunshade

1. Place the sunshade onto the rollbar and attach with the center U-bolt. Leave the nuts loose enough to adjust the sunshade so it is centered on the rollbar.
2. With the sunshade centered on the rollbar install the other (2) U-bolts using whatever set of holes line up with the radius of the rollbar.
3. Tighten all hardware.

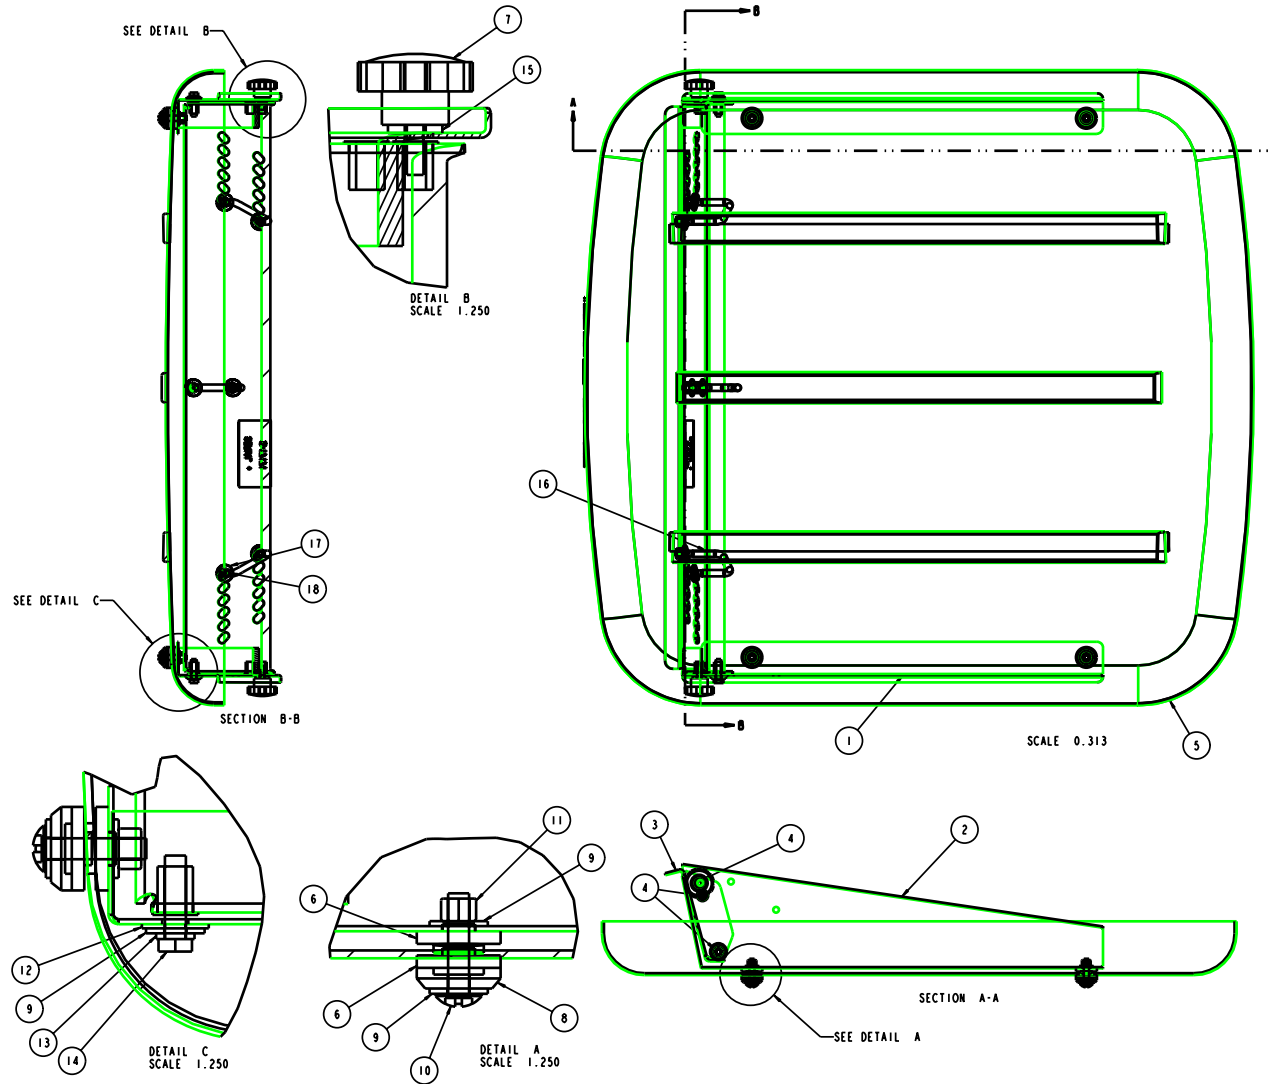

ITEM #	DESCRIPTION	QTY
1	6-43374 LEFT BRACKET	1
2	6-43375 RIGHT BRACKET	1
3	8-14771 REAR MOUNT ASSEMBLY	1
4	3-18088 .31 NUT SERT	6
5	8-14959 SUNSHADE, RED	1
6	3-16217 WASHER, RUBBER	8
7	3-16562 KNOB, PLASTIC	2
8	3-1576B WASHER, NYLON	4
9	3-10085 WASHER, .31 FLAT	10
10	3-16671 SCREW, .31 X 1.50	4
11	3-10072 NUT, .31 NYLOCK	4
12	3-10112 WASHER, FIBER, .31	2
13	3-10077 WASHER, LOCK, .31	2
14	3-10009 BOLT, .31 X 1.25	2
15	3-17226 WASHER, RUBBER	2
16	3-18000 U-BOLT, SQ	3
17	3-10086 WASHER, .38 FLAT	6
18	3-10073 NUT, .38 NYLOCK	6

