


A-11359, A-11391, A-11392 & A-11393 Bimini Sunshade for 2-Post Roll Bar

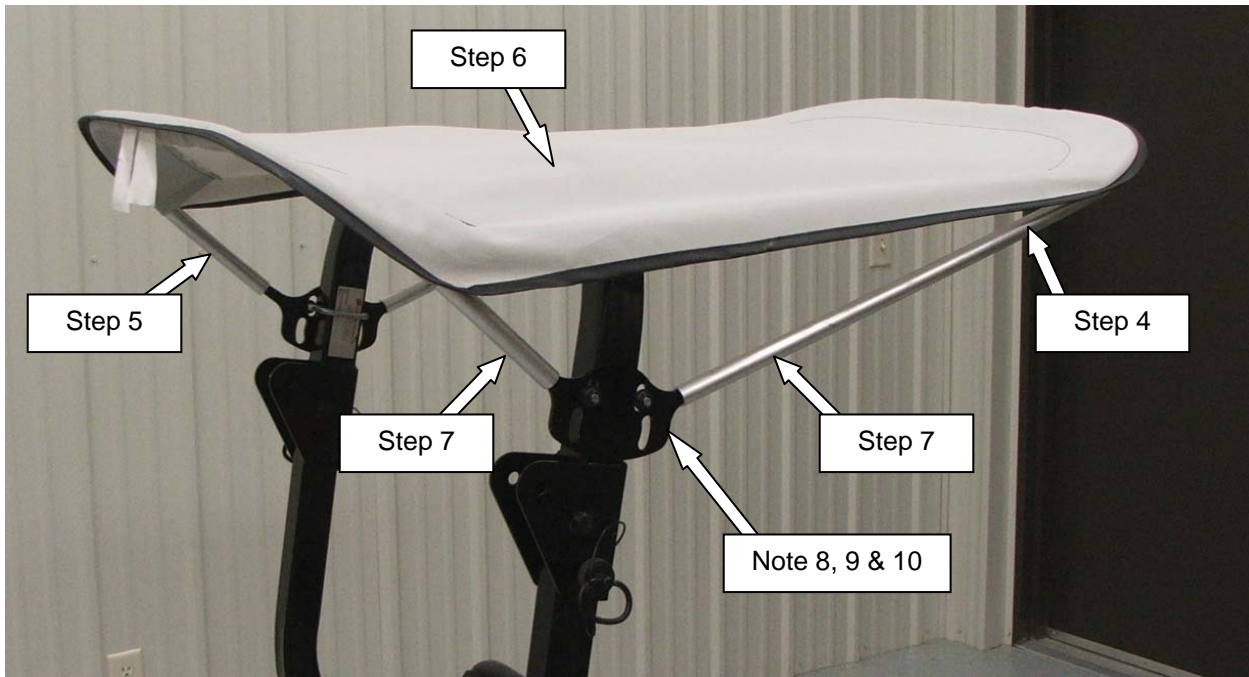

MOUNTING THE BIMINI SUNSHADE

1. The Bimini Sunshade fits various machine 2-post models with roll bars measuring 2x2 and 3x2 inches and 29-34 inches wide from outside to outside. DO NOT allow children to operate the vehicle. Do not allow adults to operate vehicle without proper instructions. Keep all shields and safety devices in place. If a safety device, shield or decal malfunctions, becomes damaged or illegible, replace it before operation is commenced. To assure vehicle is in safe operating condition, tighten loose nuts, bolts and screws.
2. Park unit on level surface and engage parking brake.
3. Remove contents from box.
4. Install longest formed tube into the front larger arc of bimini fabric.
5. Install shortest formed tube into the rear small arc of bimini fabric.
6. Align center seam in fabric with upper portion of roll bar.
7. Insert aluminum formed tubes with bimini onto the black mounting plate.
8. Set sub-assembly onto roll bar and secure each mount bracket with (1) U-bolt, (2) flat washers and (2) nylock nuts.
9. Pull the mount brackets downward until bimini fabric tightens against the top of the roll bar. View the front and back to make sure the Bimini looks centered on machine.
10. Tighten U-bolts-mount brackets.
11. **Important! The Bimini Sunshade is not designed for highway speeds. Remove the Bimini Sunshade and aluminum tubes for highway transport.**

MANUFACTURED BY:



BOX 70 • LITCHFIELD, MINNESOTA 55355
(320) 693-3221 Fax: (320) 693-7252
1-800-222-5463 www.800cabline.com