

MOUNTING INSTRUCTIONS



A-11761 INTERIOR FOAM KIT

Before you begin, read these instructions and identify all components. Please retain these instructions for future reference and parts ordering information.

Kit Components:	ITEM	QTY	PART NO.	DESCRIPTION
	1	1	05-11052	MOUNTING INSTRUCTIONS FOR A-11761
	2	1	3-19473	POLYFOAM, TOP, 3/16" X 27.01" X 34.50"

Installation:

1. Remove roof from cab. Flip roof over. See Figure 1.
2. Mark underside of roof, 12.65 inches from front and 4.00 inches from rear.
3. Peel film and apply polyfoam from the middle groove outward. Place 12.65 inches from front roof edge and 4.00 inches from rear roof edge. See Figures 1. Form polyfoam to match the underside steps of roof profile, working towards each side of roof.
4. Make a cut through fabric at rear mount hole locations.
5. Re-install roof on cab.

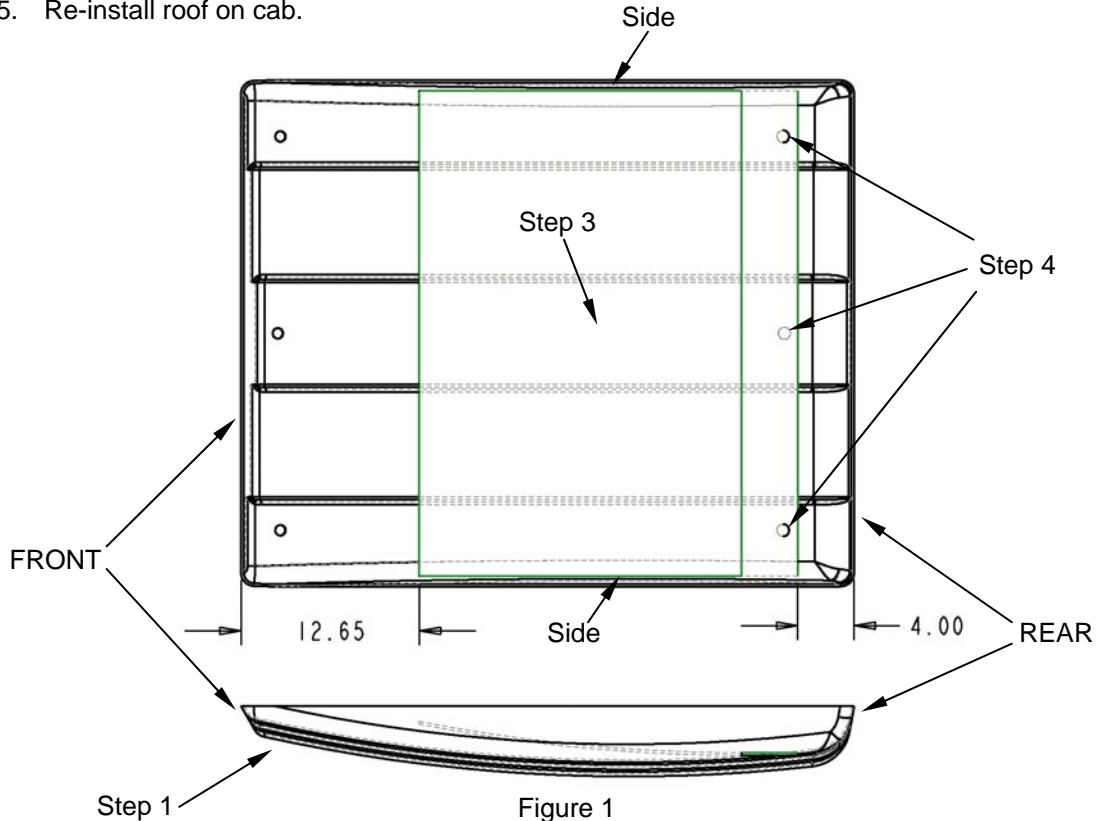


Figure 1



PO BOX 70, 1715 S. Sibley Avenue, Litchfield, MN 55355-0070
Ph: (320) 693-3221 Fax: (320) 693-7252
Website: www.800cabline.com